


Deck System

Around a Bay Window


STEP 1

Construct the largest rectangle possible to your design. Allow the end boards to extend to the house.

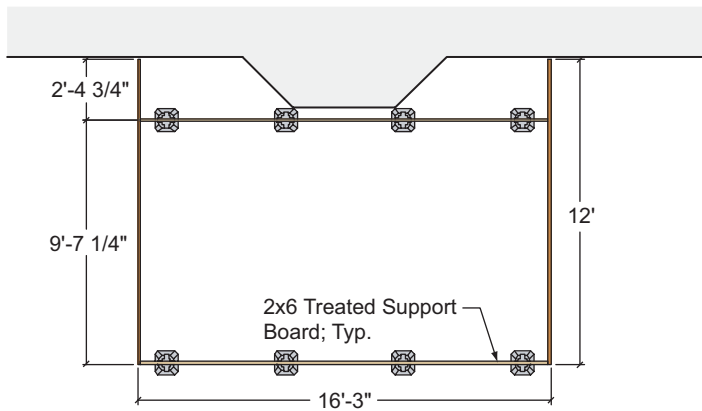


STEP 2

After "squaring" and leveling the deck, infill the remaining supports and blocks.

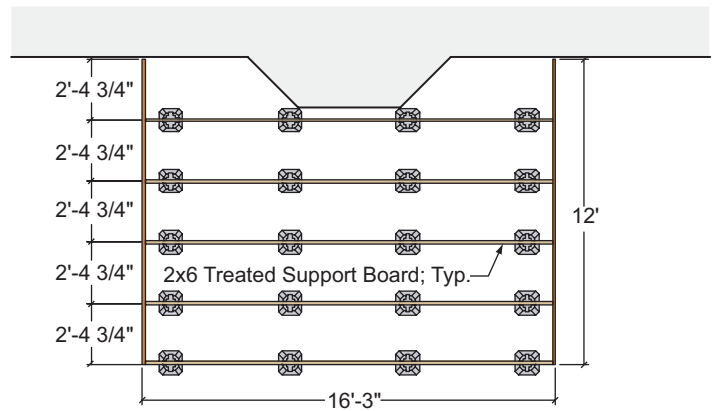


STEP 3

Add a support board as close to the house as possible. Make sure that there is a block 12 inches in from each side and they are not further than 5' apart along the support. Add some additional blocking perpendicular to the supports and one that follows the angle of the bay window.

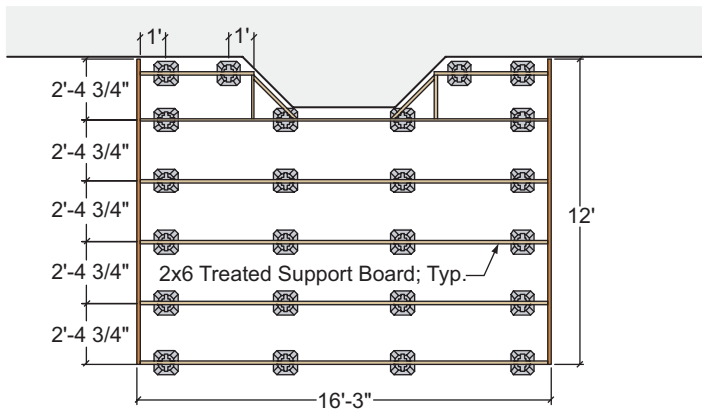

STEP 4

Completed using decking over the supports following the shape of the house.

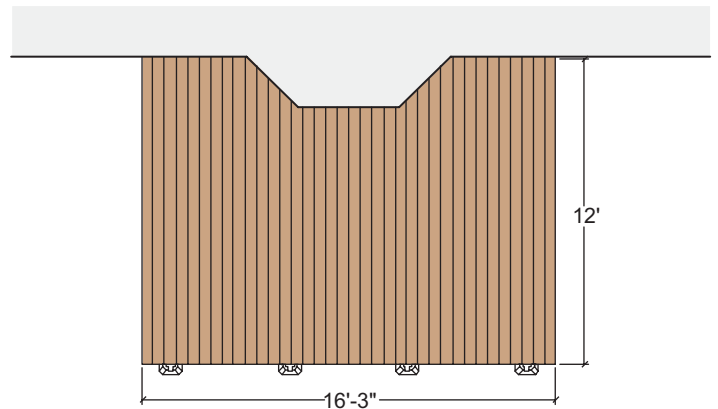

Shop Today

Build on Saturday

Enjoy on Sunday

These plans are intended for consumer use only. Copyright 2000 Proshop Plans Co. They may not be reproduced, copied, distributed or disseminated without the written permission of DEKBRANDS. DEKBRANDS and Dek-Block are trademarks of Proshop Plans Co., Inc. U.S. Patent 5,392,575, 5,953,874, 6,324,801B1, 6,446,403B2, 6,550,201B2, and 6,609,346B2 Pat. Pend/App. Pend. Manufactured under license.



WWW.DECKPLANS.COM
Hundreds of Free Plans, tips, and Ideas Available Online

Live Technical Support:
7 days a week - 5:00am to 9:00pm CST
1-800-664-2705