


# Deck System

## Laying Deck Boards with Herringbone Pattern

### Support Board Spacing

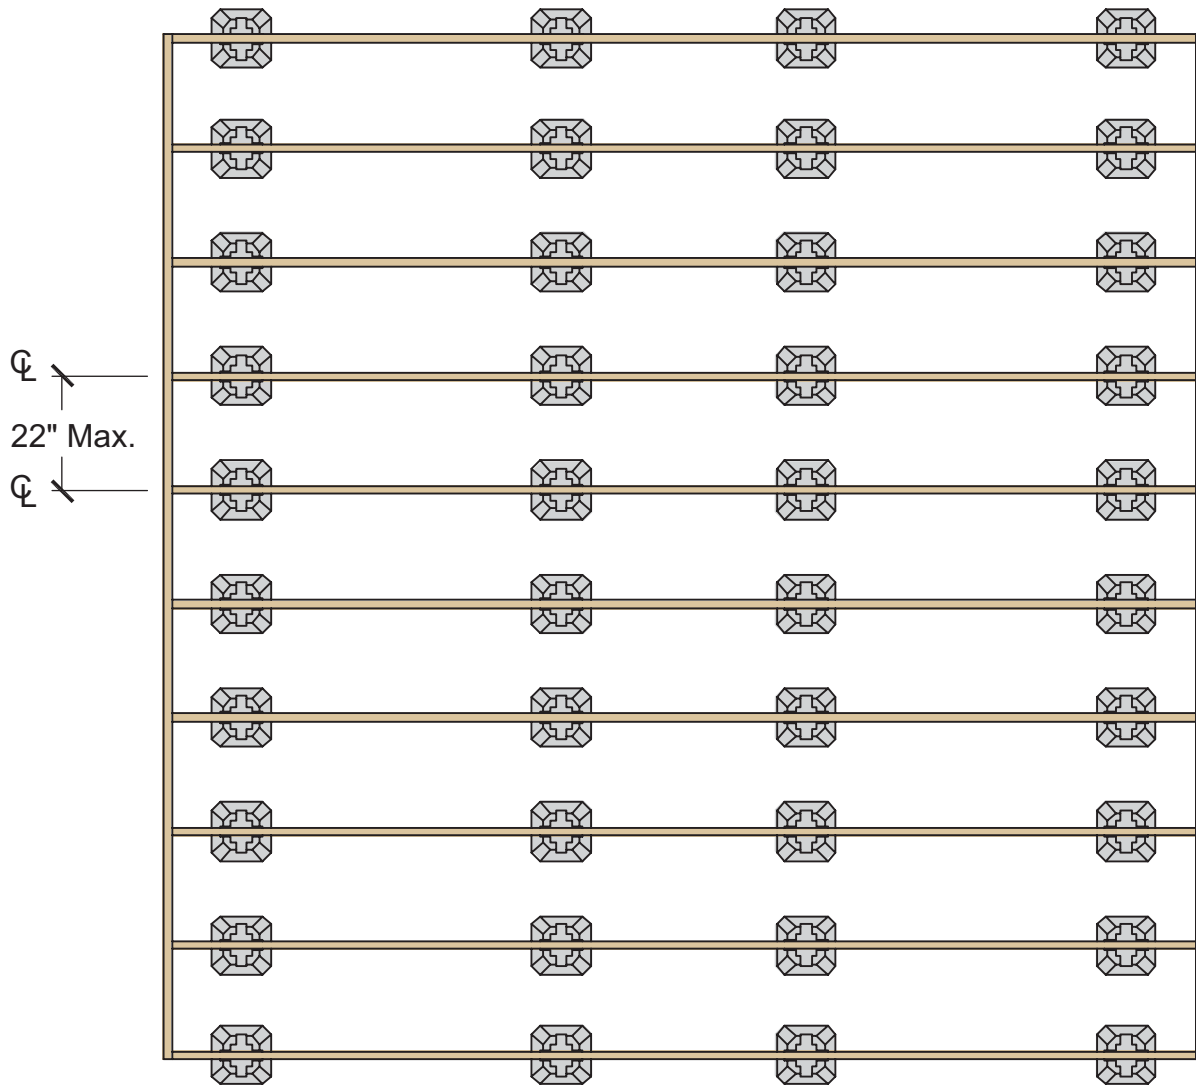

Due to the additional span for surface boards at an angle, the deck plan will need additional support boards and Dek-Block Brand Piers. The maximum row spacing for 2"x6" surface boards at a 45 degree angle is 22 inches on center. (12 inches on center for 5/4 or composite decking)

**Shop Today**

**Build on Saturday**


**Enjoy on Sunday**

These plans are intended for consumer use only. Copyright 2000 Proshop Plans Co. They may not be reproduced, copied, distributed or disseminated without the written permission of DEKBRANDS. DEKBRANDS and Dek-Block are trademarks of Proshop Plans Co., Inc. U.S. Patent 5,392,575, 5,953,874, 6,324,801B1, 6,446,403B2, 6,550,201B2, and 6,609,346B2 Pat. Pend/App. Pend. Manufactured under license.

# Deck System

## Laying Deck Boards with Herringbone Pattern

### Adding Additional Blocking

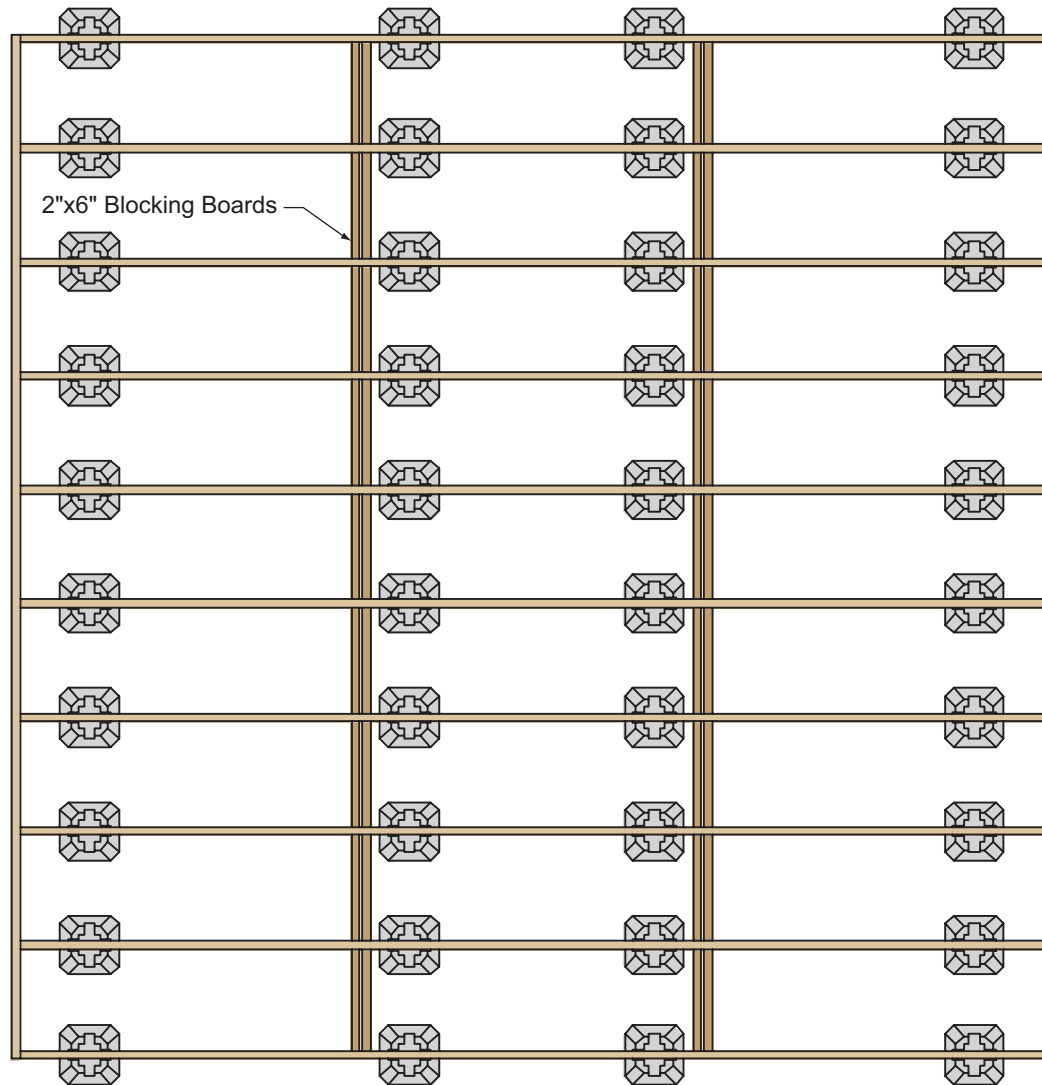

Add two 2"x6" treated blocking boards between the 2"x6" support boards at the locations where you would like the herringbone pattern to occur. If possible, leave a 1/2" space between the two blocking boards.

**Shop Today**

**Build on Saturday**

**Enjoy on Sunday**

These plans are intended for consumer use only. Copyright 2000 Proshop Plans Co. They may not be reproduced, copied, distributed or disseminated without the written permission of DEKBRANDS. DEKBRANDS and Dek-Block are trademarks of Proshop Plans Co., Inc. U.S. Patent 5,392,575, 5,953,874, 6,324,801B1, 6,446,403B2, 6,550,201B2, and 6,609,346B2 Pat. Pend/App. Pend. Manufactured under license.



**WWW.DECKPLANS.COM**  
Hundreds of Free Plans, tips, and Ideas Available Online


**Live Technical Support:**  
7 days a week - 5:00am to 9:00pm CST  
**1-800-664-2705**

Floating Foundation

# Deck System

## Laying Deck Boards with Herringbone Pattern

Attach Surface Boards

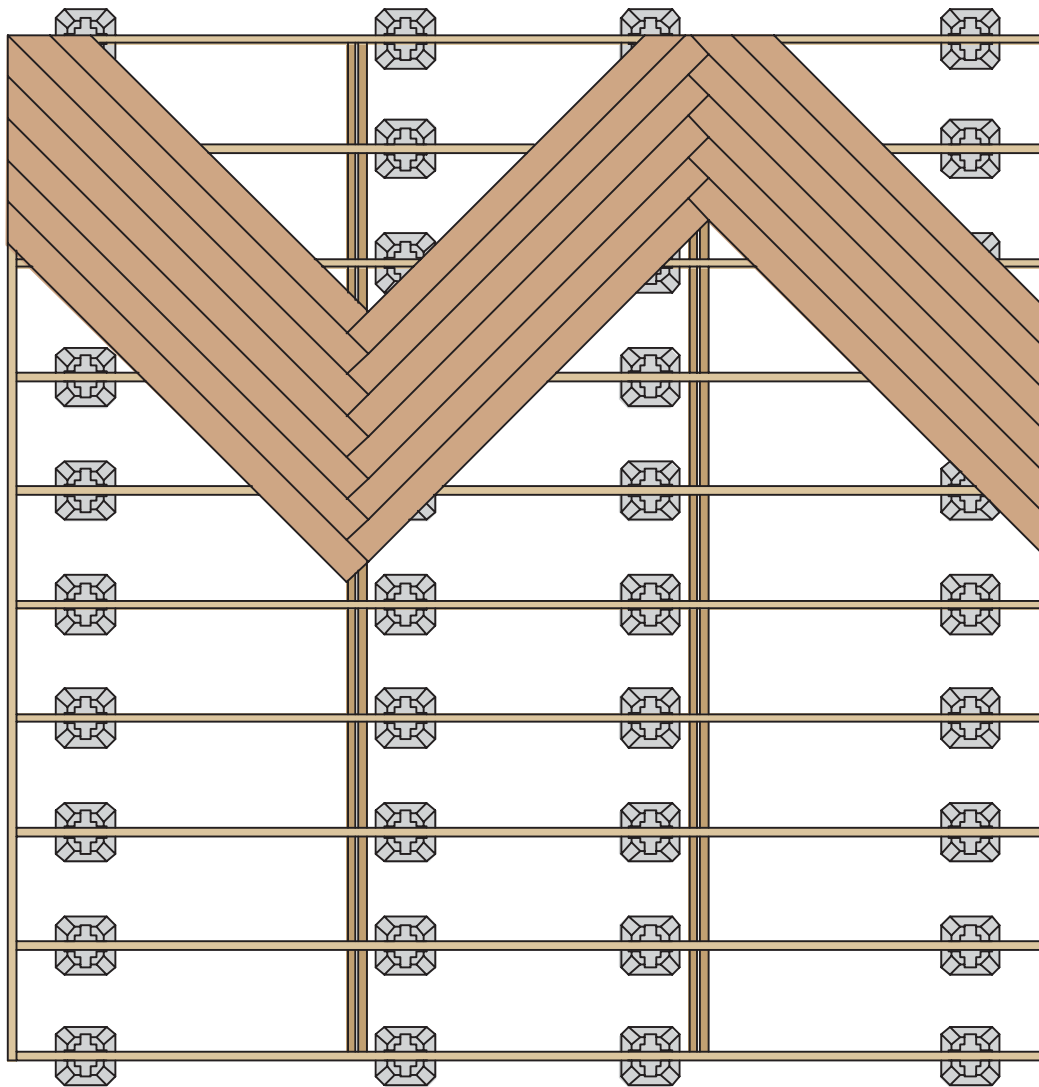

Attaching the surface boards requires careful planning and measuring. All cuts to the interior of the deck will be square and need to be aligned equally along the blocking boards. Let the boards overhang the edge of the deck. After all decking is secured, trim the edges of the deck all at one time.

**Shop Today**

**Build on Saturday**

**Enjoy on Sunday**

These plans are intended for consumer use only. Copyright 2000 Proshop Plans Co. They may not be reproduced, copied, distributed or disseminated without the written permission of DEKBRANDS. DEKBRANDS and Dek-Block are trademarks of Proshop Plans Co., Inc. U.S. Patent 5,392,575, 5,953,874, 6,324,801B1, 6,446,403B2, 6,550,201B2, and 6,609,346B2 Pat. Pend/App. Pend. Manufactured under license.

**DEKBRANDS**  
EASY-TO-DO DECKS  
*in just one day*

**WWW.DECKPLANS.COM**  
Hundreds of Free Plans, tips, and Ideas Available Online

**Live Technical Support:**  
7 days a week - 5:00am to 9:00pm CST  
**1-800-664-2705**